


Hardie Window Trim

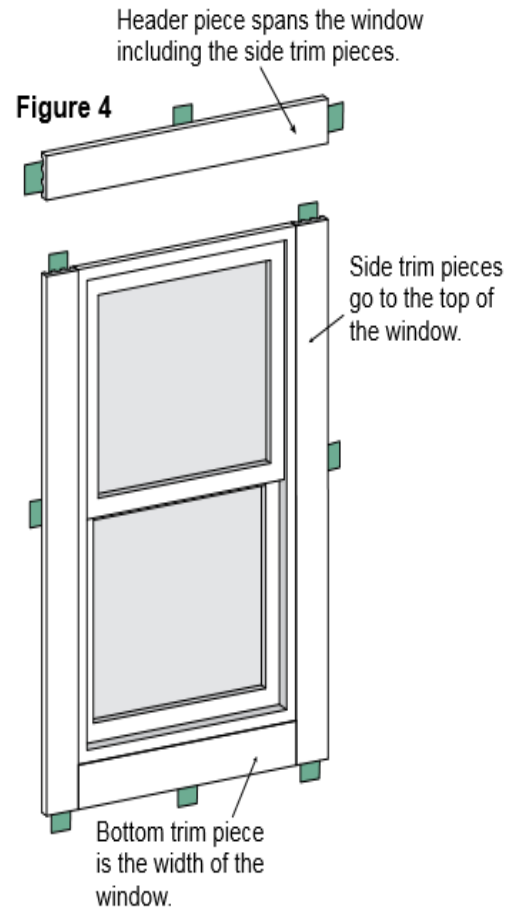

Trim Application for Windows

Trim the opening prior to the installation of the siding (Figure 4).

For openings less than 4' in size, place a HardieTrim™ Flat Tab at the end of each trim board and one tab in the center of each trim. Attach the trim boards and HardieTrim™ Flat Tabs around the opening as shown in Figure 4. Use 16 ga. galvanized 2" finish nails to ensure proper fastening if needed.

For openings greater than 4' in size, place a HardieTrim™ Flat Tab at the end of each trim board and one tab for each framing member at a maximum of 24" o.c. Attach the trim boards and HardieTrim™ Flat Tabs around the opening as shown in Figure 4. Use 16 ga. galvanized 2" long finish nails to ensure proper fastening if needed.